

Telescope brake

The telescope brake offloads the motor when the motor is not moving. This means that the telescope only can move when driven by the motor.

[See drive unit assembly](#)

From:
<https://13.53.123.107/> - **Envirologic Support Wiki**

Permanent link:
https://13.53.123.107/doku.php/parts:telescope_brake

Last update: **2021/07/19 13:10**

