


Arm

Motor: 70 rpm

Stroke: parking position to parking+1150, about 315°

Parking: about -55, parallel to boom

The arm is one of the circular movements of the robot and should be used predominantly together with the tower and the nozzle

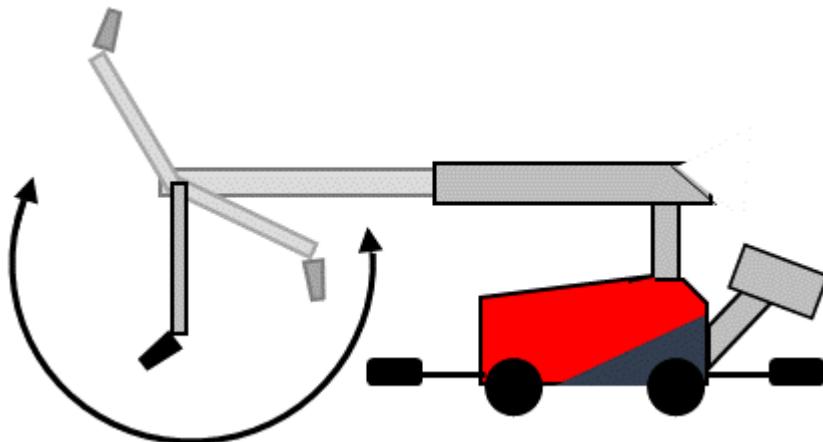

See the exploded view of the arm here

From:

<https://wiki.envirologic.se/> - Envirologic Support Wiki



Permanent link:

<https://wiki.envirologic.se/doku.php/part:arm?rev=1600847378>

Last update: **2020/09/23 00:49**