


# Arm

Motor: 70 rpm

Stroke: parking position to parking+1150, about 315°

Parking: about -55, parallel to boom

The arm is one of the circular movements of the robot and should be used predominantly together with the tower and the nozzle

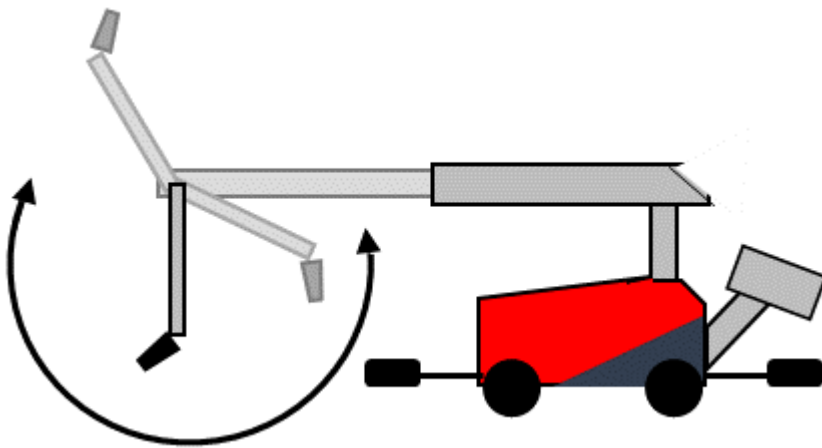

[See the exploded view of the arm here](#)

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
<https://wiki.envirologic.se/doku.php/parts:arm?rev=1600847378>

Last update: **2020/09/23 00:49**

