

# Boom


Motor: special actuator

Stroke: bottom position 0 to top position 1250, about 100°

Parking: about 710, horisontal

Homing: Move the boom all the way to the bottom and release after 2 seconds

The boom is used to take new elevations in order to continue to wash predominantly with tower, arm and nozzle.

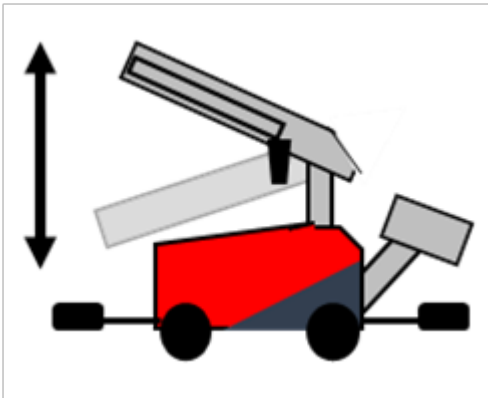

[See the exploded view of the boom here](#)

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
<https://wiki.envirologic.se/doku.php/parts:boom?rev=1600921615>

Last update: **2020/09/23 21:26**

