


# Boom

Motor: special actuator

Stroke: bottom position 0 to top position 1250, about 100°

Parking: about 710, horizontal (more info [about parking here](#))

The boom is used to take new elevations in order to continue to wash predominantly with tower, arm and nozzle.

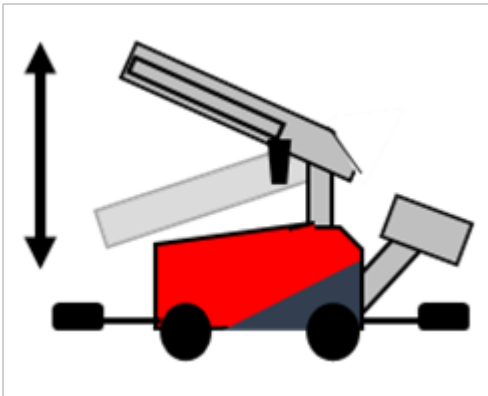

[See the exploded view of the boom here](#)

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
<https://wiki.envirologic.se/doku.php/parts:boom?rev=1601198907>

Last update: **2020/09/27 02:28**

