

# Friction clutch

In order to protect certain functions against external forces the gearboxes for the tower and the arm contain friction clutches. They release at approximately 180 Nm for the tower and 120 Nm for the arm. They can be adjusted by tightening or loosening the disc springs with the respective KM nut on outgoing axis.

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/parts:friction\\_clutch](https://wiki.envirologic.se/doku.php/parts:friction_clutch)

Last update: **2020/09/24 22:34**

