

# Fuses

There are two 30 A fuses on the robot. One on the positive side of the batteries and one on the negative side. Both are physically located in the junction box.

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

<https://wiki.envirologic.se/doku.php/parts:fuses?rev=1592082559>

Last update: **2020/06/13 14:09**

