


Fuses

There are two 30 A fuses on the robot. One on the positive side of the batteries and one on the negative side.

Both fuses are physically located in the junction box next to the batteries.

When opening this box, **be very observant that you get the lid back on properly** to avoid moisture intrusion that might cause damage to the circuit board.

Check this [video tutorial](#) if you need to check the fuses

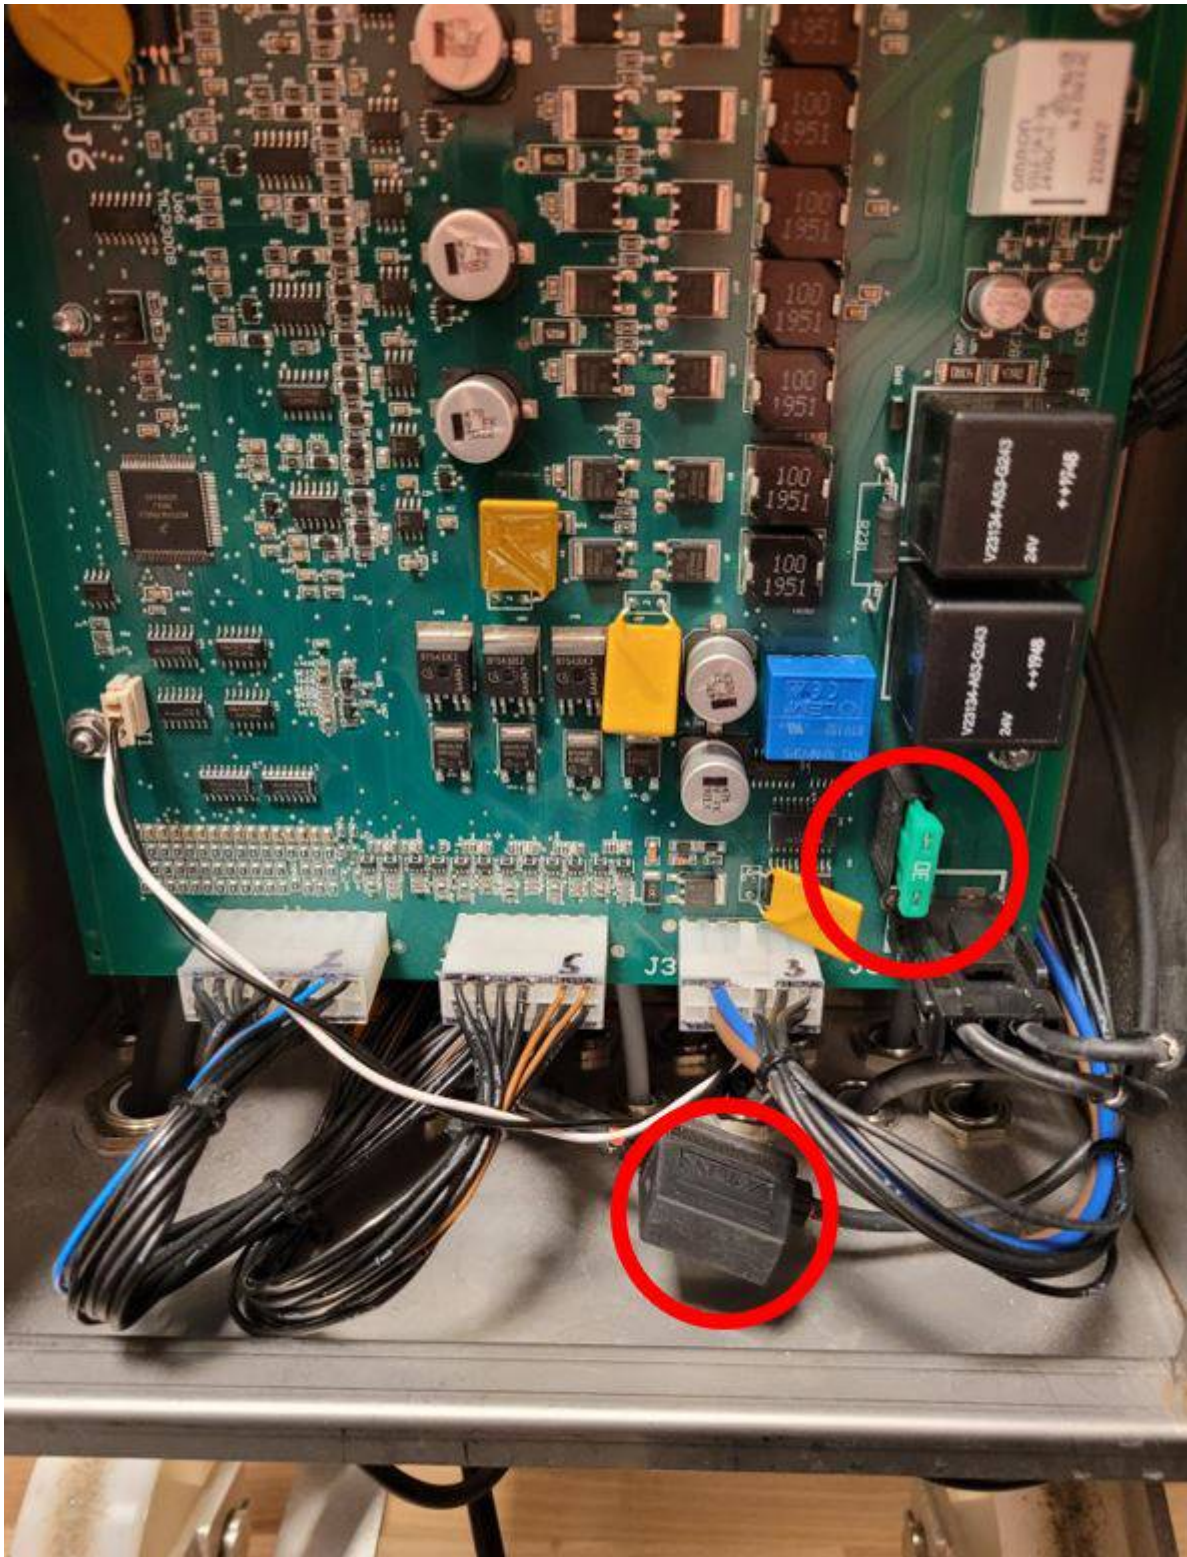

From: <https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link: <https://wiki.envirologic.se/doku.php/parts:fuses?rev=1654773784>

Last update: **2022/06/09 04:23**

