

Junction box

The junction box is found under the hood. It contains the control system electronics (PLC, router) and system [fuses](#).

Link: [Exploded view of the junction box assembly](#).

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/parts:junction_box

Last update: **2020/09/28 04:36**

