

# Junction box

The junction box is found under the hood. It contains the control system electronics and system [fuses](#).

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/parts:junction\\_box?rev=1592237146](https://wiki.envirologic.se/doku.php/parts:junction_box?rev=1592237146)

Last update: **2020/06/15 09:05**

