

Junction box

The junction box is found under the hood. It contains the control system electronics and system [fuses](#).

Link: [Exploded view of the junction box](#).

From:

<https://wiki.envirologic.se/> - Envirologic Support Wiki



Permanent link:

https://wiki.envirologic.se/doku.php/parts:junction_box?rev=1601292814

Last update: **2020/09/28 04:33**