

# Junction box

The junction box is found under the hood. It contains the control system electronics and system [fuses](#).

Link: [Exploded view of the junction box assembly.\\*\\*](#)

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/parts:junction\\_box?rev=1601292849](https://wiki.envirologic.se/doku.php/parts:junction_box?rev=1601292849)

Last update: **2020/09/28 04:34**

