

Junction box

The junction box is found under the hood. It contains the control system electronics (PLC) and system fuses.

Link: [Exploded view of the junction box assembly.](#)

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/parts:junction_box?rev=1601292942

Last update: **2020/09/28 04:35**

