

# Telescope brake

The telescope brake offloads the motor when the motor is not moving. This means that the telescope only can move when driven by the motor.

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/parts:telescope\\_brake?rev=1626725243](https://wiki.envirologic.se/doku.php/parts:telescope_brake?rev=1626725243)

Last update: **2021/07/19 13:07**

