

# Temperature

While the robot is specified to work in an ambient temperature of maximum 55 degrees Celsius (see [technical specifications](#)), the waterways (hoses, pipes and nozzles) can handle up to 80 degrees Celsius. However, make sure that water leaving the nozzle does not heat any sensitive parts of the robot above specification.

When storing the robot where there is a risk of freezing temperatures, make sure it is emptied of all water.

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
<https://wiki.envirologic.se/doku.php/parts:temperature?rev=1645989957>

Last update: **2022/02/27 11:25**

