

# Water filter

We recommend to use a water filter with the incoming water to the [high-pressure washer](#) (filter placed before the high-pressure washer). Water isn't always clean and the particles can make wear and tear on the high-pressure washer and the nozzle. Dirty water can also clog the water valve, which leads to ["Water pressure too high"-alarm](#).

The filter is simple to remove and clean when the filter is full of dirt.



*A water filter*

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/parts:water\\_filter?rev=1600337429](https://wiki.envirologic.se/doku.php/parts:water_filter?rev=1600337429)

Last update: **2020/09/17 03:10**

