

# Wheels motor


Motor: 220 rpm

Stroke: Unlimited forward and backward

Zero position sensor: None, robot uses [magnetic marker sensor](#) to zero position errors in the robot's direction.

The wheels motor is used to take new positions in the robot's direction in order to continue to wash predominantly with [tower](#), [arm](#) and [nozzle](#).

The robot has rear-wheel drive.

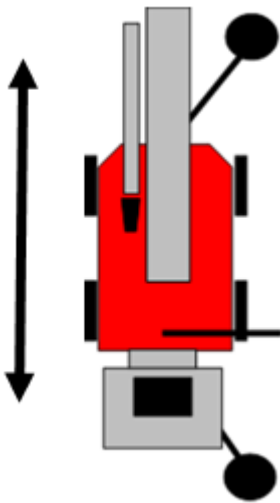

[See the exploded view of the wheels motor and gearbox here](#)

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
[https://wiki.envirologic.se/doku.php/parts:wheels\\_motor?rev=1601284120](https://wiki.envirologic.se/doku.php/parts:wheels_motor?rev=1601284120)

Last update: **2020/09/28 02:08**

