2025/03/13 20:41 1/1 Service instructions

Service instructions

Here you can find various types of instructions that will help you with different kind of tasks. *More to come...*

If the robot has lost its home sensors (zero positions).

• homing instruction

If the water valve is plugged with dirt (for example due to dirty water) the water can't turn off as normal.

• Water valve cleaning

When you see this symbol (CD-disc on top of a box) on the start screen, it means that you have an update to install. Please install the update the soonest for best performance. Read Software revisions to see what the latest changes are.

• install an update

Sliding plates replacement

• High friction in the telescope - troubleshooting

Hose grows on reel / Loose hose

From:

https://wiki.envirologic.se/ - Envirologic Support Wiki

Permanent link:

https://wiki.envirologic.se/doku.php/service:service instructions?rev=159376833

Last update: 2020/07/03 02:25

