


Gearbox, arm

Part of [Arm assembly](#)

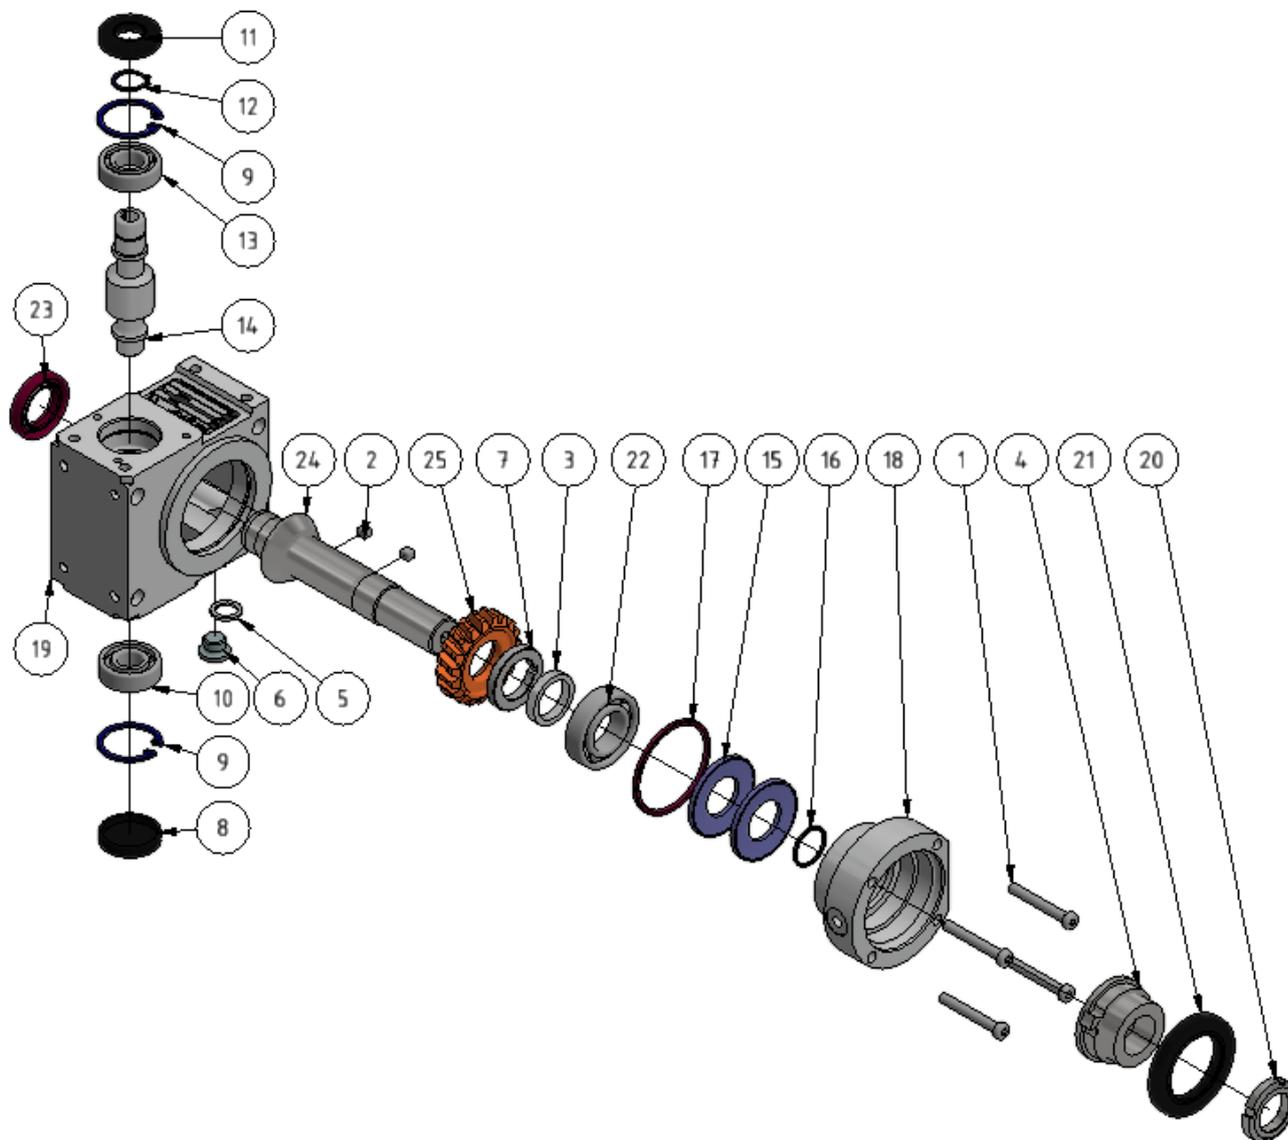

ITEM	DESCRIPTION	PART NUMBER	QTY
1	Screw	63060458	4
2	Key	64055061	2
3	Ring	91062404	1
4	Hub	93187671	1
5	Sealing	62012165	1
6	Plug	63140007	1
7	Spacer	3585701	1
8	Lid	62035086	1
9	Lock ring SGH35	64000356	2
10	Bearing 6202	60062020	1

ITEM	DESCRIPTION	PART NUMBER	QTY
11	Sealing 17x35x7	62173571	1
12	Lock-ring SGA17	64000175	1
13	Bearing 6003	60060030	1
14	Axle	93187611	1
15	Spring washer	63502537	2
16	O-ring 21x2.0	62021205	1
17	O-ring 50.8x3.53	62050355	1
18	Housing	93187661	1
19	Gear house	93187721	1
20	Nut KM-5	63050034	1
21	Sealing 40x62x7	62406271	1
22	Bearing 6005	60060050	2
23	Sealing 25x40x7 DT	62254071	1
24	Axle	93187681	1
25	Wheel	9318744	1

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

<https://wiki.envirologic.se/doku.php/service:spl:93187651-1?rev=1601223516>

Last update: **2020/09/27 09:18**

