

Battery voltage low

This is a [soft](#) alarm. However, no new programs will be able to start.

Description

The battery voltage has gone below 21 V. If the robot is washing the current program at the current marker will be finished but no new programs will be started before the batteries have been charged to more than 25 V.

Troubleshooting

Charge the [Batteries](#).

From:
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:
https://wiki.envirologic.se/doku.php/troubleshooting:alarm:tss_battery_voltage_low

Last update: **2020/07/07 05:13**

