

Hose spreader not moving

General troubleshooting steps are:

- Run wheels forward and backward for at least 60 s in each direction

If needed, open the waterproof box (4 screws) and check the following:

- Measure voltages on the 3 pole connector in the green box (both directions)
- Measure voltage over motor poles in green box (both directions)
- Release spreader with black button on the side of the green box, center it and run wheels again

Center hose spreader

If hose spreader does not run equally far in both directions, use a wrench to rotate the axis to center it.

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:hose-spreader?rev=1593765715

Last update: **2020/07/03 01:41**

