

# Hose spreader not moving

General troubleshooting steps are:

- Run wheels forward and backward for at least 60 s in each direction

If needed, open the waterproof box (4 screws) and check the following:

- Measure voltages on the 3 pole connector in the green box (both directions)
- Measure voltage over motor poles in green box (both directions)
- Release spreader with black button on the side of the green box, center it and run wheels again

[Detailed instructions are found here](#)

## Center hose spreader

If hose spreader does not run equally far in both directions, use a wrench to rotate the axis to center it.

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:hose-spreader?rev=1600062037](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:hose-spreader?rev=1600062037)

Last update: **2020/09/13 22:40**

