

Initialization does not finish

Description

If the message “Initializing, please wait” does not disappear within 20 seconds after the robot operators panel has booted.

Troubleshooting

The issue is most probable lacking communication between panel and circuit board. Cable and connectors needs to be checked by trained service personnel.

From:
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:
https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:no_init_done

Last update: **2020/06/24 05:44**

