

Red alarm window won't disappear

A big red alarm window appears over the display or come and goes now and then.

Description

This red alarm window appears when the emergency stop is pressed down.

Troubleshooting

- Press the red window on the display. If the window continues to appear:
- Check if the emergency stop -button is active (the red button under the display is pressed). Pull up the emergency stop -button to release the alarm. Press the red window in the display afterwards.
- Restart the robot.
- Damaged cables by mice etc. Contact Service.

From:
<https://13.53.123.107/> - **Envirologic Support Wiki**

Permanent link:
https://13.53.123.107/doku.php/troubleshooting:no_alarm:red_alarm_window_won_disappear

Last update: **2020/09/13 22:51**

