## Red alarm window won't disappear

A big red alarm window appears over the display or come and goes now and then.

## Description

This red alarm window appears when the emergency stop is pressed down.

## Troubleshooting

- Press the red window on the display. If the window continues to appear:
- Check if the emergency stop -button is active (the red button under the display is pressed). Pull up the emergency stop -button to release the alarm. Press the red window in the display afterwards.
- Restart the robot.
- Damaged cables by mice etc. Contact Envirologic.

From: https://wiki.envirologic.se/ - Envirologic Support Wiki

Permanent link: https://wiki.envirologic.se/doku.php/troubleshooting:no\_alarm:red\_alarm\_window\_won\_disappear?rev=1593766550

Last update: 2020/07/03 01:55

