

# Red alarm window won't disappear

A big red alarm window appears over the display or come and goes now and then.

## Description

This red alarm window appears when the emergency stop is pressed down.

## Troubleshooting

- Press the red window on the display. If the window continues to appear:
- Check if the emergency stop -button is active (the red button under the display is pressed). Pull up the emergency stop -button to release the alarm. Press the red window in the display afterwards.
- Restart the robot.
- Damaged cables by mice etc. Contact Envirologic.

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:red\\_alarm\\_window\\_won\\_disappear?rev=1593766550](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:red_alarm_window_won_disappear?rev=1593766550)

Last update: **2020/07/03 01:55**

