

Red alarm window won't disappear

A big red alarm window appears over the display or come and goes now and then.

Description

This red alarm window appears when the emergency stop is pressed down.

Troubleshooting

- Press the red window on the display. If the window continues to appear:
- Check if the emergency stop -button is active (the red button under the display is pressed). Pull up the emergency stop -button to release the alarm. Press the red window in the display afterwards.
- Restart the robot.
- Damaged cables by mice etc. Contact Service..

From:

<https://wiki.envirologic.se/> - Envirologic Support Wiki

Permanent link:

https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:red_alarm_window_won_disappear?rev=1600062665

Last update: 2020/09/13 22:51

