

# Robot positions incorrect

## Description

If the robot does not position correctly during washing it could be due to a number of reasons:

- [Memory lost](#) after restart
- Moved or faulty zero position sensors
- Setting boom zero position not in bottom (ie. accidentally set zero position when it is stuck)

Lost positions will show when robot parks incorrectly between washing programs or when it does not wash where it should.

## Troubleshooting

- Check [tower parking](#) position

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:robot\\_positions\\_incorrect?rev=1600070622](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:robot_positions_incorrect?rev=1600070622)

Last update: **2020/09/14 01:03**

