

Telescope does not move

Description

The telescope does not move but no alarm is given. Reasons can be either

- Damaged motor gear
- Damaged brake

Troubleshooting

Check that the position changes on the manual screen when trying to move the telescope in order to verify that the motor is trying to move the telescope.

Also check [these steps](#).

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:telescope_movement

Last update: **2021/07/19 13:01**

