

# Telescope does not move

## Description

The telescope does not move but no alarm is given. Reasons can be either

- Damaged motor gear
- Damaged brake

## Troubleshooting

Check that the position changes on the manual screen when trying to move the telescope in order to verify that the motor is trying to move the telescope.

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:telescope\\_movement?rev=1598248906](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:telescope_movement?rev=1598248906)

Last update: **2020/08/23 23:01**

