

# Telescope does not move

## Description

The telescope does not move but no alarm is given. Reasons can be either

- Damaged motor gear
- Damaged brake

## Troubleshooting

Check that the position changes on the manual screen when trying to move the telescope in order to verify that the motor is trying to move the telescope.

Also check [these](#) steps.

From:  
<https://wiki.envirologic.se/> - Envirologic Support Wiki

Permanent link:  
[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:telescope\\_movement?rev=1626724798](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:telescope_movement?rev=1626724798)

Last update: **2021/07/19 12:59**

