

If you have problems with your robot that doesn't set an alarm, then you've come to the right place. Check below if you can find the solution to your problem.

- [Water does not turn off](#)
- [Hose spreader is not moving](#)
- [Hose does not reel in](#)
- [Hose grows on reel / Hose is loose on the reel](#)
- [Red alarm window won't disappear](#)
- Problem with a motor
- [Robot does not follow the wall](#)
- [Robot is running in to things](#)
- [Robot loses positioning, clock, homing etc.](#)
- Heavy wear on hoses
- Robot does not turn on or off
- Robot does not charge
- [Battery capacity seems low](#)
- The screen does not react when touched
- [No SMS is sent](#)
- [Initialization does not finish](#)
- [Robot restarts unexpectedly](#)
- [Telescope does not move](#)
- [Item is missing \(location, program or recipe\)](#)

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:ts\\_no\\_alarm?rev=1600062164](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarm?rev=1600062164)

Last update: **2020/09/13 22:42**

