

If you have problems with your robot that doesn't set an alarm, then you've come to the right place. Check below if you can find the solution to your problem.

- Water does not turn off
- Hose spreader is not moving
- Hose does not reel in
- Hose grows on reel / Hose is loose on the reel
- Red alarm window won't disappear
- Problem with a motor
- Robot does not follow the wall
- Robot is running in to things
- Robot loses positioning, clock, homing etc.
- Heavy wear on hoses
- Robot does not turn on or off
- Robot does not charge
- **Battery capacity seems low**
- The screen does not react when touched
- **No SMS is sent**
- Initialization does not finish
- Robot restarts unexpectedly
- Telescope does not move
- Item is missing (location, program or recipe)

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarm?rev=1600062164

Last update: **2020/09/13 22:42**

