

Troubleshooting - without alarm

If you have problems with your robot that doesn't set an alarm, then you've come to the right place. Check below if you can find the solution to your problem.

Computer

- [Red alarm window won't disappear](#)
- [Robot loses positioning, clock, homing etc.](#)
- The screen does not react when touched
- [No SMS is sent](#)
- [Initialization does not finish](#)
- [Item is missing \(location, program or recipe\)](#)

Hose

- [Hose spreader is not moving](#)
- [Hose does not reel in](#)
- [Hose grows on reel / Hose is loose on the reel](#)
- Heavy wear on hoses

Movements

- Problem with a motor
- [Robot does not follow the wall](#)
- [Robot is running in to things](#)
- [Telescope does not move](#)

Power

- Robot does not turn on or off
- Robot does not charge
- [Battery capacity seems low](#)
- [Robot restarts unexpectedly](#)

Water

- [Water does not turn off](#)

Last update: 2020/09/13 22:47 troubleshooting:no_alarm:ts_no_alarm https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarm?rev=1600062440

From: <https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link: https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarm?rev=1600062440

Last update: **2020/09/13 22:47**

