

# Troubleshooting - without alarm

If you have problems with your robot that doesn't set an alarm, then you've come to the right place. Check below if you can find the solution to your problem.

## Computer/panel

- [Initialization does not finish](#)
- [Item is missing \(location, program or recipe\)](#)
- [No SMS is sent](#)
- [Red alarm window won't disappear](#)
- [Robot loses positioning, clock, homing etc.](#)
- [The screen does not react when touched](#)

## Hose

- [Hose does not reel in](#)
- [Hose grows on reel / Hose is loose on the reel](#)
- [Hose spreader is not moving](#)
- [Heavy wear on hoses](#)

## Movements

- [Problem with a motor](#)
- [Robot does not follow the wall](#)
- [Robot is running in to things](#)
- [Telescope does not move](#)

## Power

- [Battery capacity seems low](#)
- [Robot does not charge](#)
- [Robot does not turn on or off](#)
- [Robot restarts unexpectedly](#)

## Water

- [Water does not turn off](#)

Last update: 2020/09/13 22:49 troubleshooting:no\_alarm:ts\_no\_alarm [https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:ts\\_no\\_alarm?rev=1600062565](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarm?rev=1600062565)

---

From: <https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link: [https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:ts\\_no\\_alarm?rev=1600062565](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarm?rev=1600062565)

Last update: **2020/09/13 22:49**

