

Robot does not turn on or off

Description

If the screen does not light up when the robot is turned on or if it does not shut down when the robot is turned off it is an indication of power problems.

Troubleshooting

If the robot does not turn on:

- Check that the battery connectors are firmly attached
- Check that the batteries are charged
- Is there a clicking sound from the junction box when the power button is toggled? If there is, but the screen does not light up, there might be a problem with the screen. Contact service for further troubleshooting.
- Check the [fuses](#)
- Check battery cables and the orange cable between junction box and panel box for damages

If the robot does not turn off:

- Either the power button or the circuit board is at fault. Contact service for further troubleshooting.

From:
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:
https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:ts_no_alarmrobot_does_not_turn_on?rev=1601013015

Last update: **2020/09/24 22:50**

