

# Washing aborted unexpectedly

## Description

The Start screen is showing but the washing has not finished and the robot has not returned to the first marker.

## Troubleshooting

- Check that the robot has not [restarted](#) during washing. It should raise [an alarm](#) if it has.
- Check for dirt under the panel lid, possibly pressing on the screen

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/troubleshooting:no\\_alarm:washing\\_aborted](https://wiki.envirologic.se/doku.php/troubleshooting:no_alarm:washing_aborted)

Last update: **2020/09/14 02:35**

