


# Screens

Here you can find information for each button for the most common screens.

---

## Start screen


The robot is started by pressing the On/Off button. After about 30 seconds the operator panel has booted and begins to initialize the robot. Please wait a few seconds until the initialization is done and the home screen is shown.

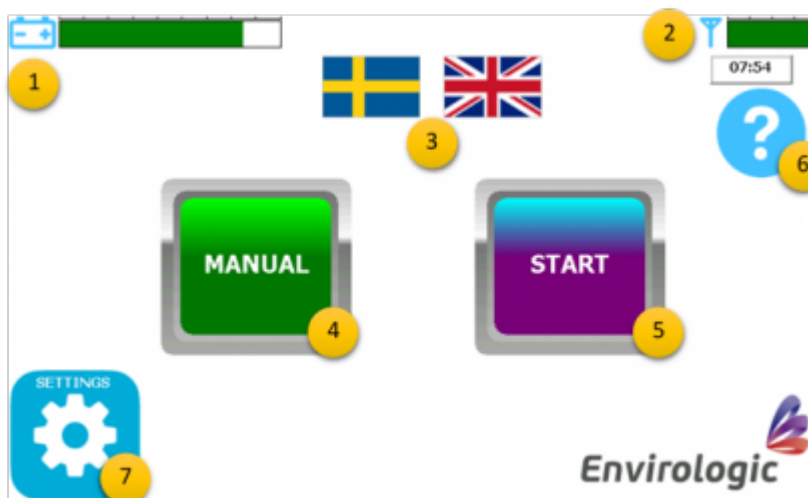


1. Battery status
2. Mobile signal status
3. Switch language (press one flag to select language)
4. Manual movement -mode
5. Start automatic wash -mode
6. Help button - Enable/disable (shown on all screens)
7. Settings (password required)

## Manual screen

The manual screen will allow you to move each function, one at the time. Press any arrow to move the related function in the given direction. Use this screen when transporting the robot. The joystick does also work when this screen is displayed.

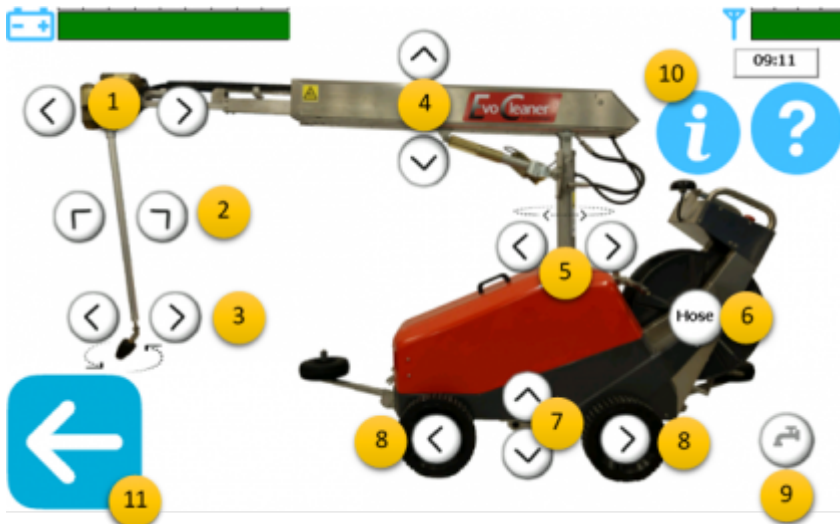


1. Telescope out/in
2. Arm out/in
3. Nozzle clockwise/counter-clockwise
4. Boom up/down
5. Tower left/right
6. Roll up the hose
7. Transport wheels down/up
8. Move robot forwards/backwards (double tap a direction to lock that motion. Must be manually stopped)
9. Open/close water valve
10. Information - Enable detailed view
11. Go back (home screen)

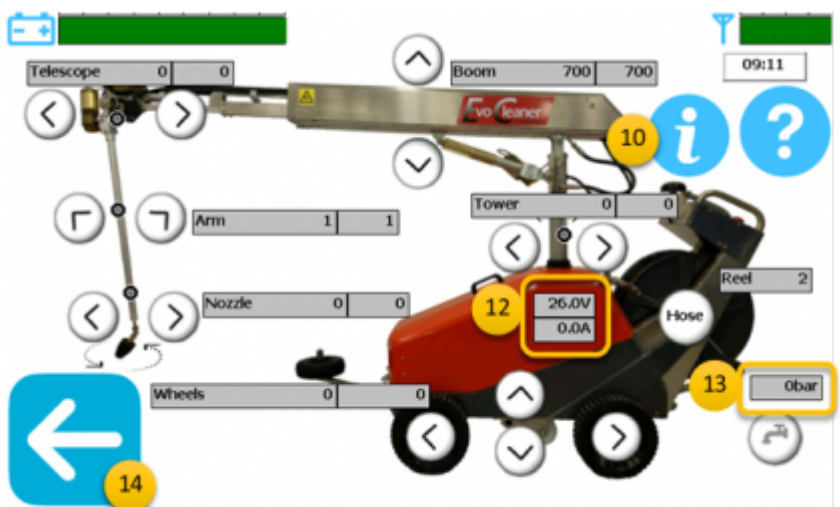

- Information - Detailed view** (show exact positions for each motor)
10. Information - Press to disable detailed view
  12. Voltage status and ampere usage
  13. Measured water pressure (bar)
  14. Go back (home screen)

## Settings screen

All programming is made from the settings screen. You do also access internet screen (1.) from here. This screen is password protected to keep uneducated personnel from programming.

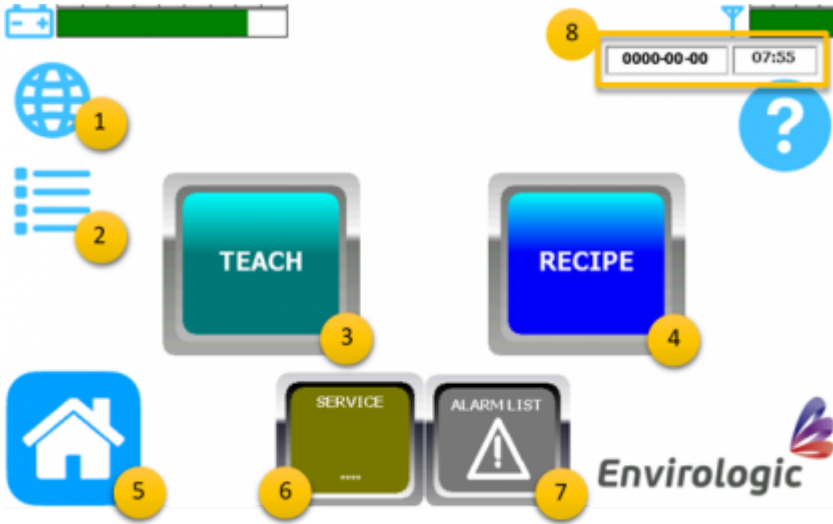


1. Internet screen - Enter phone number / [Connect WiFi](#)
2. File browser - Locations/Recipes/Programs
3. Teach - Create new location/programs (educated personnel only)
4. Recipe - Create new/edit existing recipe (educated personnel only)
5. Go back to home screen
6. Service - Authorised personnel only (password required)
7. Alarm list - List of recent alarms
8. Date / Time - Press to edit date or

time

## Internet screen

The EVO Cleaner must have a given number to be able to send a text message for finished wash or if an alarm occurs. This is where you add you phone number.

### How to enter phone number

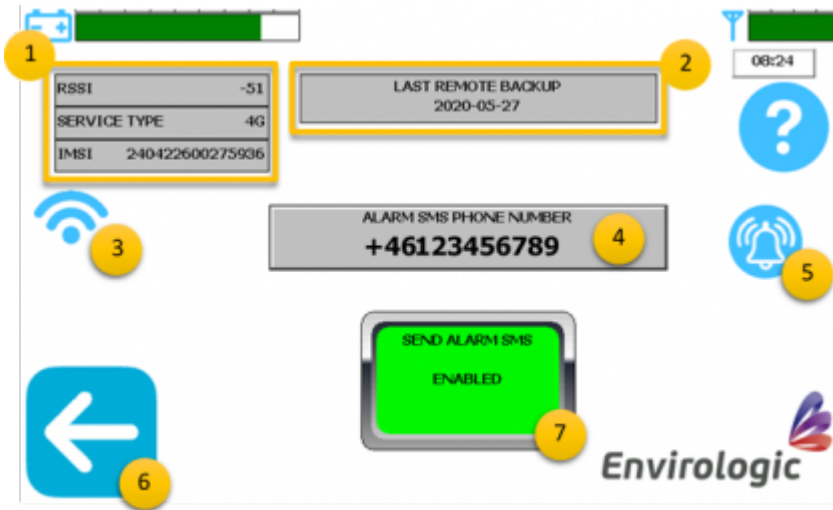

1. RSSI - Expected signal strength  
Service type - 3G or 4G connection  
IMSI - International Mobile Subscriber Identity  
(unique SIM-card identification number)
2. Last remote backup - Last sent backup to our servers (new location, new program, new recipe)
3. [WiFi settings](#) (only on 2020 years model)
4. [Enter phone number](#) - Press link for more information
5. Triggers text message-test

6. Go back (settings screen)
7. Send alarm - Enable/disable the function

From: <https://wiki.envirollogic.se/> - **Envirollogic Support Wiki**

Permanent link: [https://wiki.envirollogic.se/doku.php/user\\_manuals:screens?rev=1601021648](https://wiki.envirollogic.se/doku.php/user_manuals:screens?rev=1601021648)

Last update: 2020/09/25 01:14



