

# SMS

On the Internet screen, a mobile phone number can be entered in order to receive SMS messages from the robot. There are mainly 2 types of SMS messages that are sent from the robot: alarms and finished.

## Alarm SMS

+46712345678

Alarm: Robot stuck 00256

IMSI: 234567890123456

The information given in an alarm SMS is the following:

- Recipient phone number (used by a server to determine where to send the message from the robot)
- Alarm type, can be any of the following:
  - First marker not found
  - Robot stuck, the code shows motor and direction:
    - 0 = [any](#)
    - 1 = boom up
    - 2 = boom down
    - 4 = tower right
    - 8 = tower left
    - 16 = robot backward
    - 32 = robot forward
    - 64 = telescope out
    - 128 = telescope in
    - 256 = arm out
    - 512 = arm in
    - 1024 = nozzle clockwise
    - 2048 = nozzle counter-clockwise
  - Control system error
  - Hose stuck
- Pressure fault, the code shows how:
  - 512 = [too high](#)
  - 1024 = [too low](#)
- Ongoing run aborted
- Battery low, the code shows when:
  - 1 = [active](#)
  - 3 = [idle](#)
- SIM card identification number

## Finished SMS

+46712345678

HOUSE\_3 finished

IMSI: 234567890123456

The information given in a finished SMS is the following:

- Recipient phone number (used by a server to determine where to send the message from the robot)
- Finished location
- SIM card identification number

## Test SMS

A test SMS triggered from the Internet screen looks like this:

+46712345678

Modem Test OK

IMSI: 234567890123456

From:

<https://wiki.envirologic.se/> - Envirologic Support Wiki

Permanent link:

[https://wiki.envirologic.se/doku.php/user\\_manuals:sms-feature?rev=1593766117](https://wiki.envirologic.se/doku.php/user_manuals:sms-feature?rev=1593766117)



Last update: **2020/07/03 01:48**