

Clutch handle

The robot can be manually moved either by manpower or by using the motors for transport. For unpowered transport, the robot is declutched using the clutch handle on the right-hand side of the operators panel and handlebars.

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/parts:clutch_handle

Last update: **2020/09/21 07:01**

