

# Junction box

The junction box is found under the hood. It contains the control system electronics (PLC, router) and system [fuses](#).

Link: [Exploded view of the junction box assembly](#).

From:  
<https://13.53.123.107/> - **Envirologic Support Wiki**

Permanent link:  
[https://13.53.123.107/doku.php/parts:junction\\_box](https://13.53.123.107/doku.php/parts:junction_box)

Last update: **2020/09/28 04:36**

