

Transport wheel

The transport wheel (center wheel) is used to make it easier to turn (pivot) the robot or to climb level differences and thresholds. It is operated from the [Manual screen](#) where it can be lowered or raised.

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

https://wiki.envirologic.se/doku.php/parts:transport_wheel

Last update: **2020/09/21 00:00**

