

# Robot does not charge

## Description

When connecting the charger only the orange status light should be turned on. If both the orange and the green lights are on when the charger is connected something is wrong.

## Troubleshooting

- Make sure you follow the [general instructions for charging](#)
- Check that the robot is turned off
- Check that the battery connectors are firmly attached
- Check that there is no dirt or corrosion on the robot charging connector, spray with 5-56 or WD-40. To keep the charging connector in good condition, always rinse the connector after automatic washing.
- Check the cables between charging connector, battery and [junction box](#) for damages
- Check the [fuses](#)

From:  
<https://13.53.123.107/> - **Envirologic Support Wiki**

Permanent link:  
[https://13.53.123.107/doku.php/troubleshooting:no\\_alarm:robot\\_does\\_not\\_charge](https://13.53.123.107/doku.php/troubleshooting:no_alarm:robot_does_not_charge)

Last update: **2021/01/21 02:46**

