


# Screens

Here you can find information for each button for the most common screens.

## Start screen



The robot is started by pressing the On/Off button. After about 30 seconds the operator panel has booted and begins to initialize the robot. Please wait a few seconds until the initialization is done and the start screen is shown.

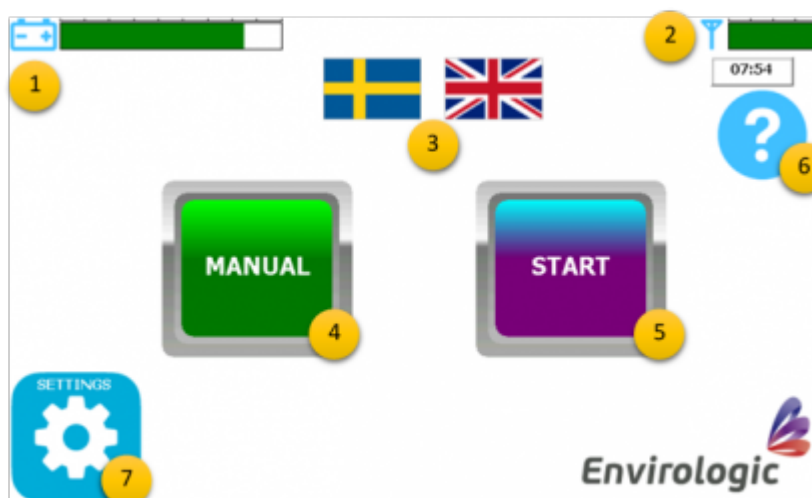

1. Battery status
2. Mobile signal status
3. Switch language (press one flag to select language)
4. Manual movement -mode
5. Start automatic wash -mode
6. Help button - Enable/disable (shown on all screens)
7. Settings (password required)


## Manual screen

The manual screen will allow you to move each function, one at the time. Press any arrow to move the related function in the given direction. Use this screen when transporting the robot. The joystick does also work when this screen is displayed.

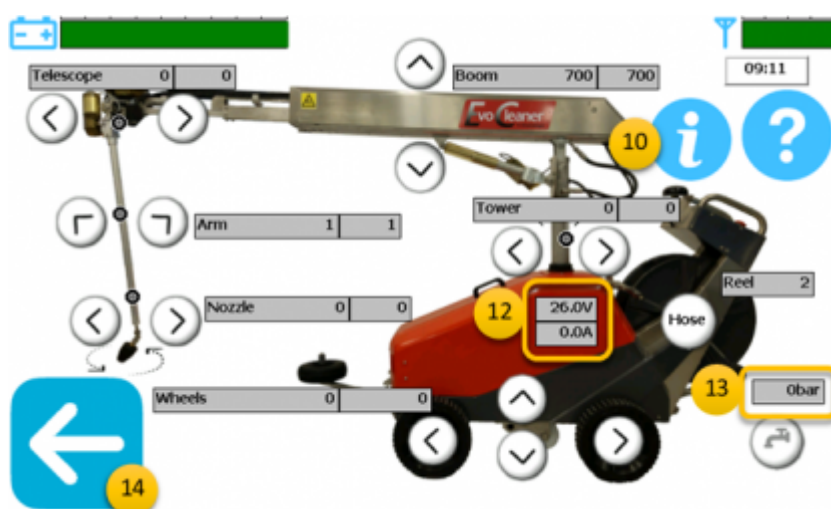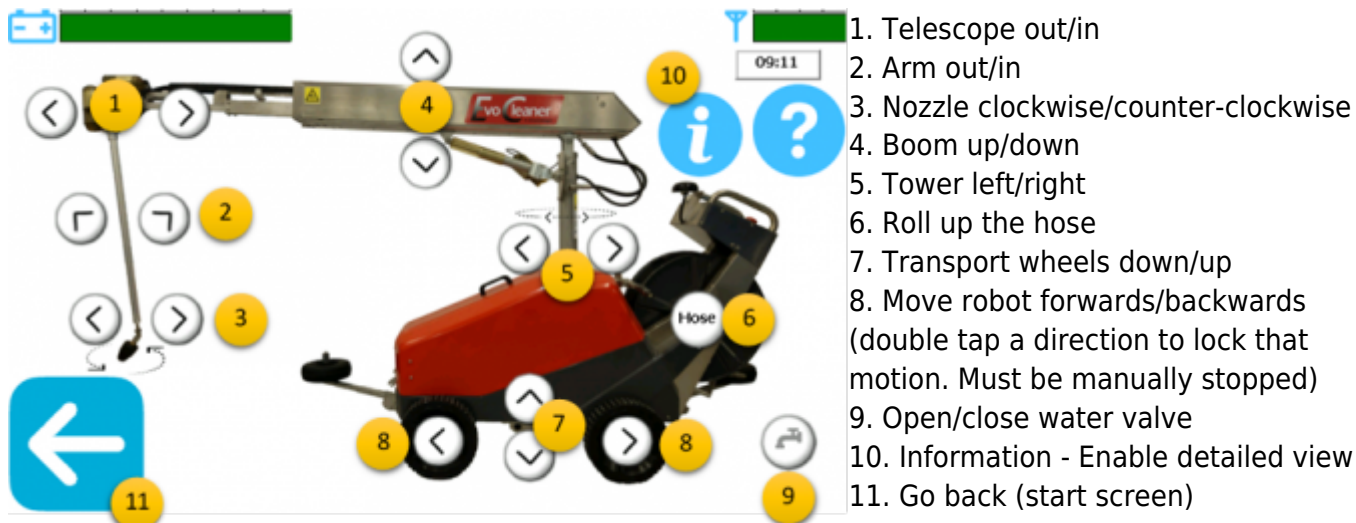

## Settings screen

All programming is made from the settings screen. You do also access internet screen (1.) from here. This screen is password protected to keep uneducated personnel from programming.

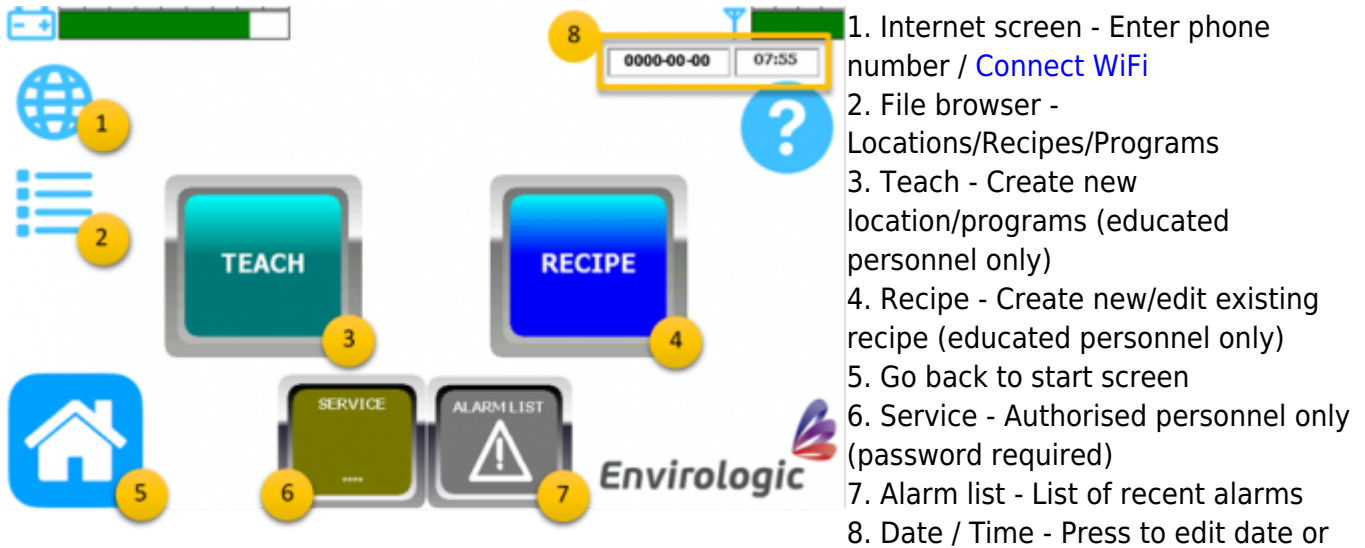


time

## Internet screen

The EVO Cleaner must have a given number to be able to send a text message for finished wash or if an alarm occurs. This is where you add your phone number.

### How to enter phone number

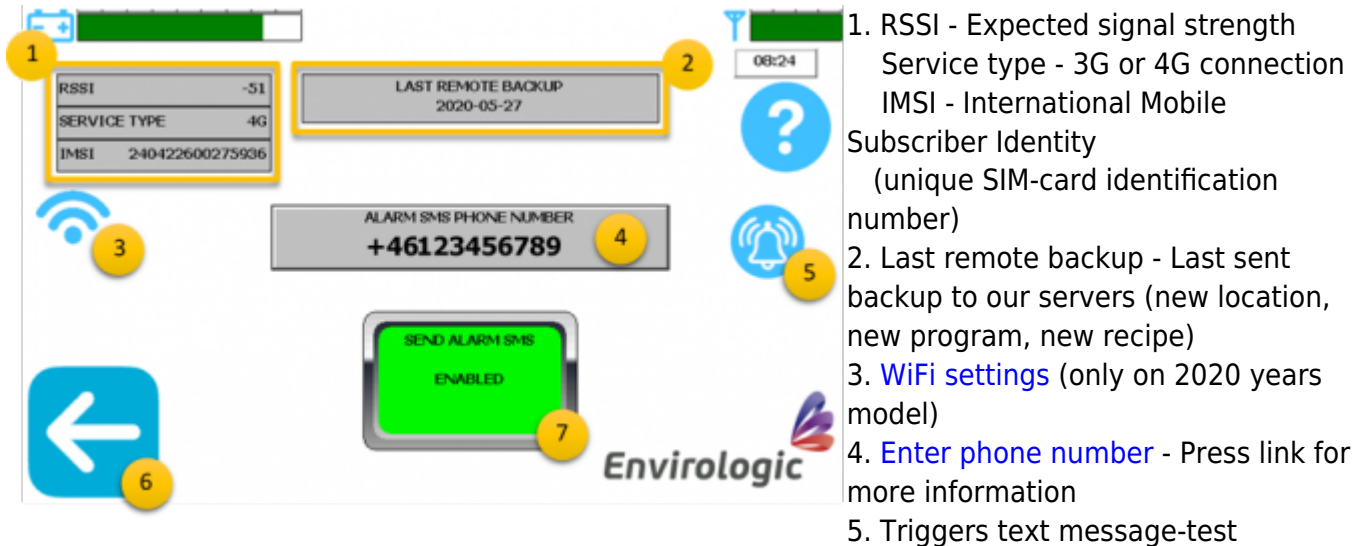

6. Go back (settings screen)

7. Send alarm - Enable/disable the function

From:  
<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:  
[https://wiki.envirologic.se/doku.php/user\\_manuals:screens](https://wiki.envirologic.se/doku.php/user_manuals:screens)

Last update: **2023/06/23 04:14**



