

Wheels motor


Motor: 220 rpm

Stroke: Unlimited forward and backward

Zero position sensor: None, robot uses [magnetic marker sensor](#) to zero position errors in the robot's direction.

The wheels motor is used to take new positions in the robot's direction in order to continue to wash predominantly with [tower](#), [arm](#) and [nozzle](#).

The robot has rear-wheel drive.

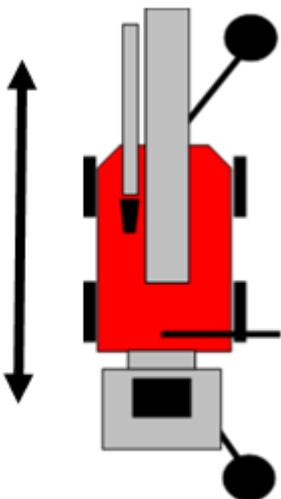

[See the exploded view of the wheels motor and gearbox here](#)

From:

<https://wiki.envirologic.se/> - Envirologic Support Wiki

Permanent link:

https://wiki.envirologic.se/doku.php/partswheels_motor

Last update: **2020/09/28 02:08**

