

Arm


Motor: 70 rpm

Stroke: parking position to parking+1150, about 315°

Parking: about -55, parallel to boom

Zero position sensor: about 15° out from parked position

The arm is one of the circular movements of the robot and should be used predominantly together with the tower and the nozzle during washing.

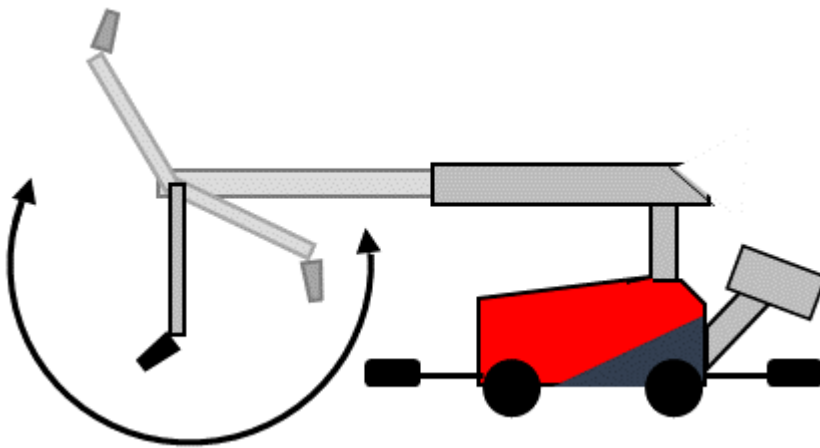

[See the exploded view of the arm here](#)

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

<https://wiki.envirologic.se/doku.php/parts:arm?rev=1600921716>

Last update: **2020/09/23 21:28**

