
Boom

Motor: special actuator

Stroke: bottom position 0 to top position 1250, about 100°

Parking: about 710, horisontal (more info about parking here)

The boom is used to take new elevations in order to continue to wash predominantly with tower, arm and nozzle.

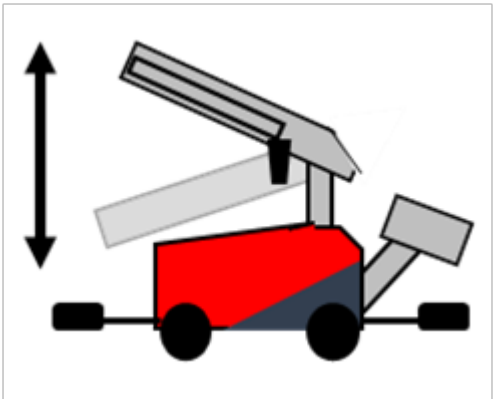

See the exploded view of the boom here

From:
https://wiki.envirologic.se/ - **Envirologic Support Wiki**

Permanent link:
https://wiki.envirologic.se/doku.php/parts:boom?rev=1601198907

Last update: **2020/09/27 02:28**