

# Aisle and robot measurements

The EVO Cleaner needs certain measurements to fit in a corridor and to turn around corners.

---

## EVO Cleaner in operating mode

These are the recommended minimal measurements for the robot to operate with in an aisle.


Remember to adjust the guidance wheels so the robot is as centered as possible in the aisle.

---


### Narrow driving wheels

When the narrow (35 mm) driving wheels are mounted the EVO Cleaner's minimal position for the guidance wheels are position 1.

The measurements below refers to guidance wheels at position 1.

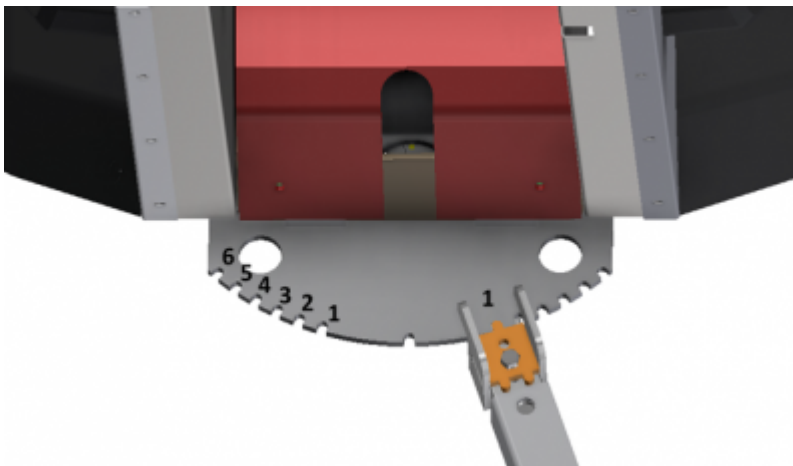

*Minimal guidance wheels adjustment when narrow driving wheels are used.*

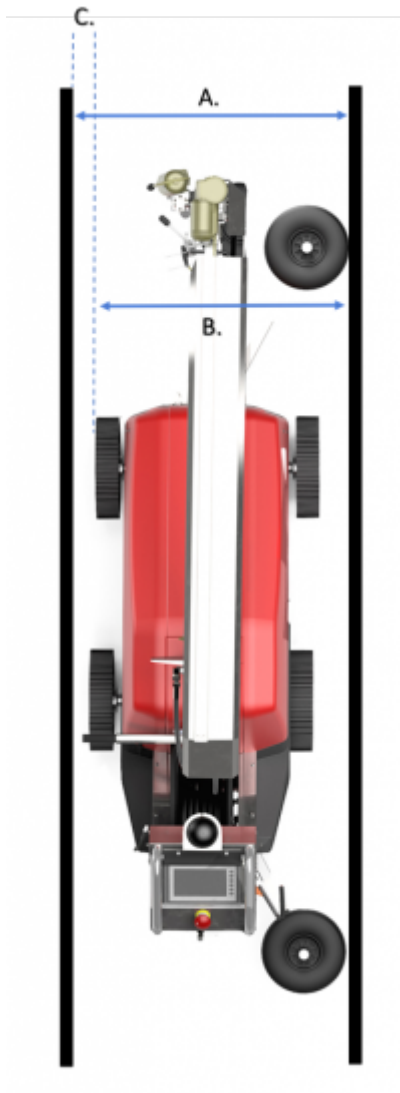

**Narrow driving wheels recommended measurements with guidance wheels adjusted:**

A. - Recommended minimal width of the aisle: 70 cm.

B. - Robot actual minimal width (guidance wheels position 1): 65 cm.

C. - Recommended free space between wall and driving wheels: 5 cm.


Overview figure and measurments with narrow driving wheels and guidance wheels on position 1.

For the narrowest aisles we recommend using [corner wheels](#).


## Wide driving wheels

When the wide (70 mm) driving wheels are mounted the EVO Cleaner's recommended minimal position for the guidance wheels are position 3.

The measurments below refers to guidance wheels at position 3. Position 2 might be possible to use if the support walls are flat and even without obstacles.

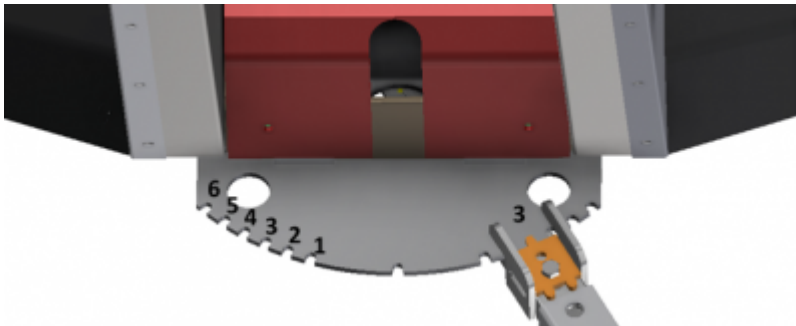

Minimal guidance wheels adjutsment when wide driving wheels are used.

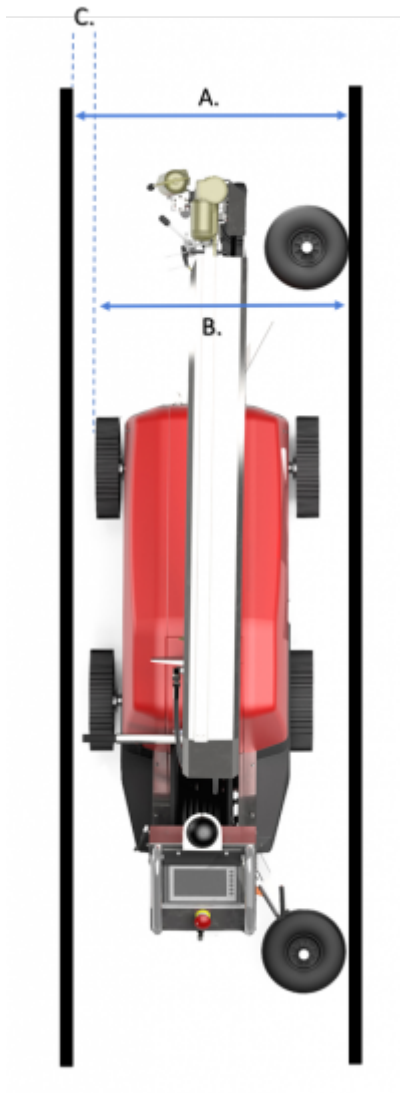


**Wide driving wheels recommended measurements with guidance wheels adjusted:**

- A. - Recommended minimal width of the aisle: 81 cm.
- B. - Robot actual minimal width (guidance wheels position 3): 76 cm.
- C. - Recommended free space between wall and driving wheels: 5 cm.

Overview figure and measurements with wide driving wheels and guidance wheels on position 3.

## Cornering - From aisle to aisle

The measurements below are the minimal measures needed to turn the EVO Cleaner around a corner. The measurements shall be taken at the narrowest part of the corner. In a doorway for example. Remove guidance wheels for better maneuverability and use the operators panel to turn the tower/boom around the corner.

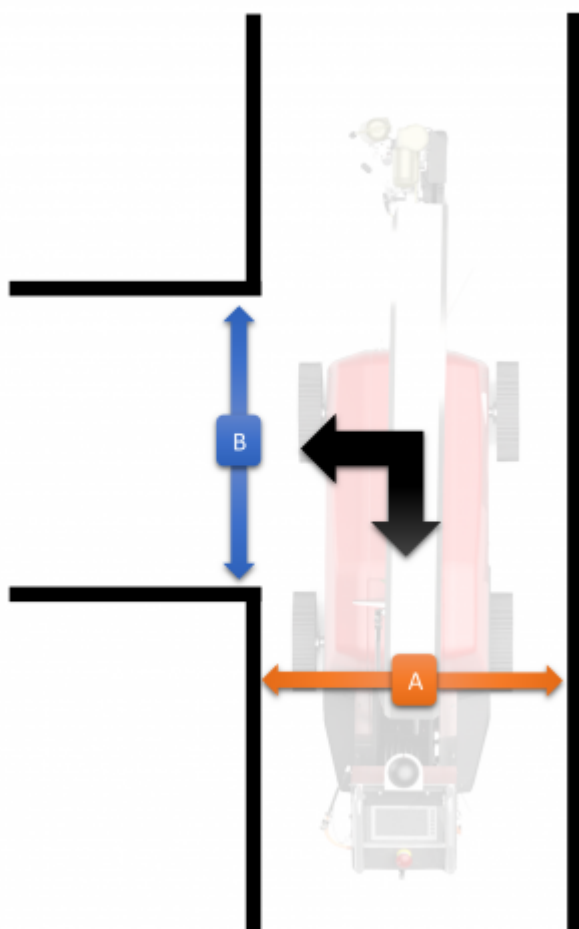

### Narrow wheels - Minimal cornering measurements

Aisle width - A (mm)	Aisle width - B (mm)
900	800
950	750
1050	700
1300	650

### Wide wheels - Minimal cornering measurements

Aisle width - A (mm)	Aisle width - B (mm)
950	800

From:

<https://wiki.envirologic.se/> - **Envirologic Support Wiki**

Permanent link:

[https://wiki.envirologic.se/doku.php/aisle\\_robot\\_measurements](https://wiki.envirologic.se/doku.php/aisle_robot_measurements)

Last update: **2022/01/03 10:57**

